



# 300 LUMEN LED LANTERN

MODEL: 30300

## Warnings:

- Do not look directly into the LED light.
- Do not allow children to use LED light unless under the supervision of an adult.

## Parts List

1. Light cover
2. LED light and control
3. Battery Cover



## Battery installation

1. Remove battery cover by turning battery cover to the left
2. Install three 1.5v D batteries\* as shown in picture and using the polarity labels inside holder
3. Line up arrow on battery cover and arrow on battery holder
4. Turn battery cover to the right to securely close


\*Batteries sold separately

### Battery Holder



Holder arrow

### Battery Cover

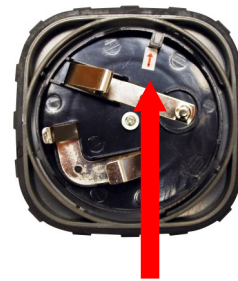

Cover arrow



To change lighting mode simply use push button

1. Low
2. High
3. Flashing
4. Off

## Hang

1. Remove light cover
2. Flip up hook
3. Hang



## Specifications

Battery Type: 3 x 1.5v D size (sold separately)

Battery Life: 3 days on high

6 days on low

10 days flashing

2 years green LED indicator

Bulb Type: White LED\*

\*non-replaceable



Customer Support: 800-495-9278

Decko Products - 2301 Traffic St. NE - Minneapolis, MN - 55413