
1. Place hinge bolts (A) through holes in bowel with the washer (B) between hinge and bowel. See Figure 1

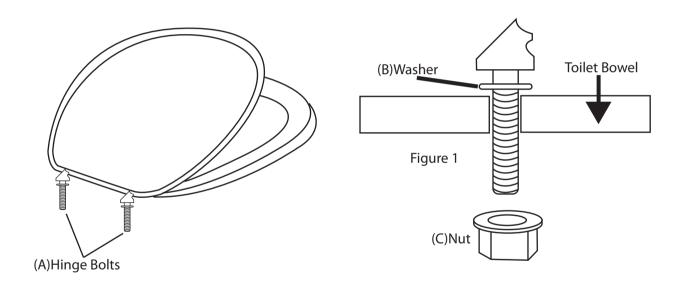

2. Tighten nut (C) from below the toilet bowel.