
Owners Manual For Log Swing SKU# 271-1055 Model# 82300

Customer Service: Decko Products 2301 Traffic St. NE Minneapolis, MN 55413 1-800-495-9278

Thank You for your purchase of a finely crafted log swing from Decko Products. The following contains assembly instructions as well as care and maintenance suggestions. Please take a moment to completely read and familiarize yourself with this information. If you have any questions regarding your purchase, please contact us at 1-800-495-9278

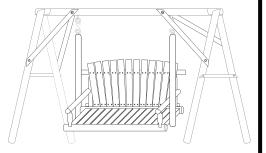

WARNINGS

Please read and understand the following safety warnings to prevent personal injury and/or damage to your product

- 1. To avoid possible personal injury and/or damage to the swing, do not exceed 400lbs of weight while using the log swing.
- 2. To prevent tipping, swing gently. Excessive, rapid swinging may cause the swing to tip over.
- 3. Keep fingers clear of all moving parts and hardware, including all pivot points.
- 4. Make sure that the log swing is placed on a solid, level surface. Uneven surfaces may cause damage and/or the log swing to tip over.

FINISHING TIPS (For unfinished wood)

Your Decko Woods furniture is made from high quality, Select grade fir. It is naturally resistant to rot and decay. Proper finishing will help assure the beauty and durability of your chair. If you choose to paint your log swing, you should use an exterior grade primer followed by a high quality exterior oil or latex based paint. If you choose to have the product retain its natural color, you should apply a natural oil-based stain or preservative annually or as needed. When finishing, make sure you treat the ends of the wood parts that come in contact with the ground. If you leave the chair natural without adding any finish, it will weather to a silver gray color

Contact your local paint store, home center or hardware store for other finishing recommendations.

MAINTENANCE

Very little maintenance is required for your swing. Periodically check all fasteners to make sure they are properly secured. Re-tighten if necessary.

NOTE: It is <u>NOT</u> recommended to use power tools for assembly. They may cause over tightening and damage to your swing.

NOTICE!

It is normal for the parts of the swing to check or crack. This is caused by the normal expansion and contraction of the wood during changes in humidity and or temperature. This will not affect the structural integrity of the swing.


Tool Required for Assembly


- 1. Phillips Screwdriver
- 2. Slotted Screwdriver
- 3. Rubber Mallet

Version: 2-10-10


Log Swing Hardware

(Hardware pictured below is actual size)

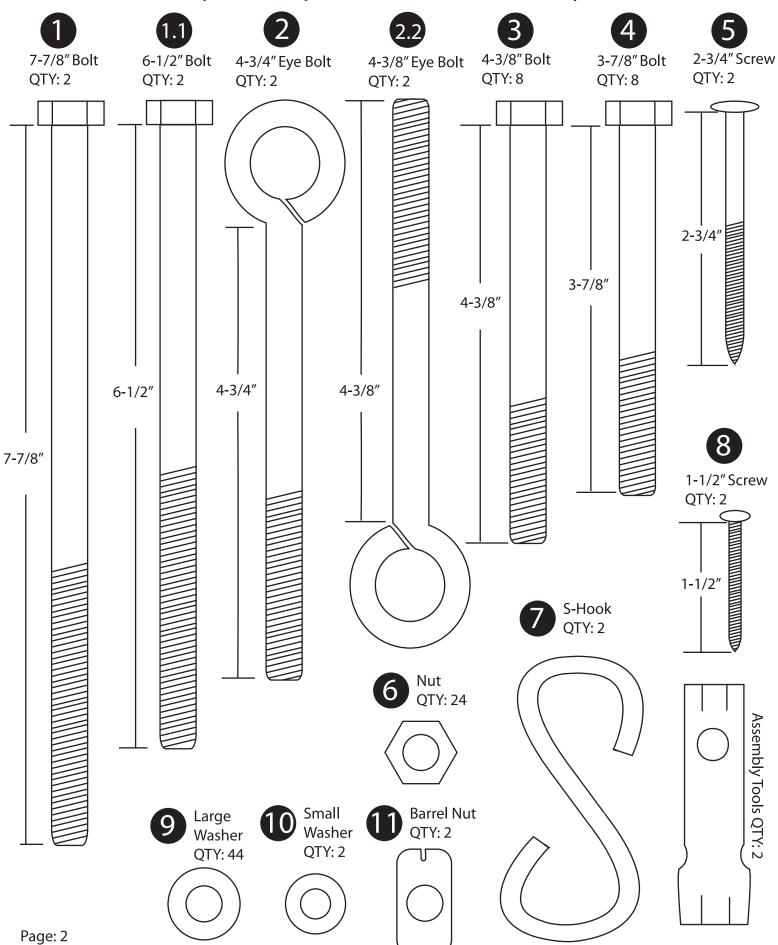


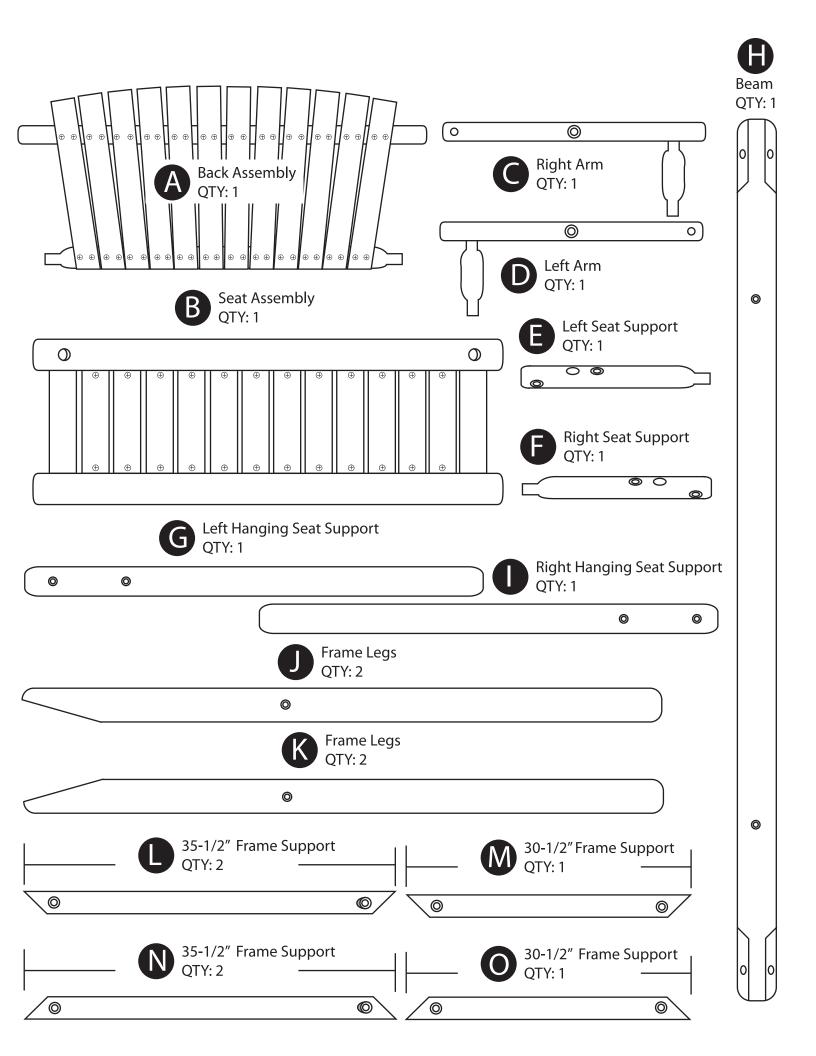


Step 1 Assembly

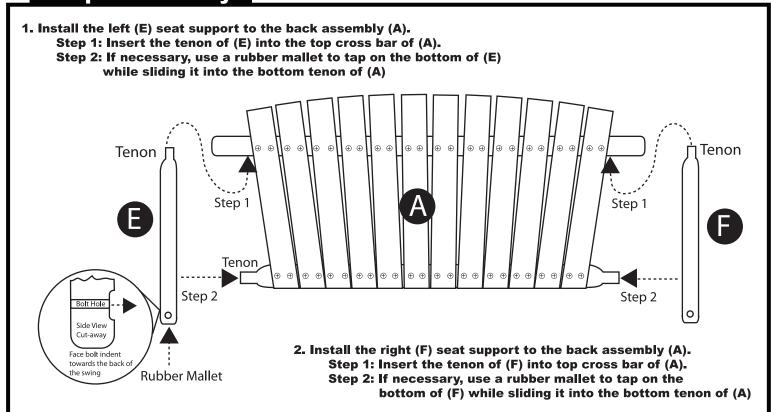

Step 2 Assembly

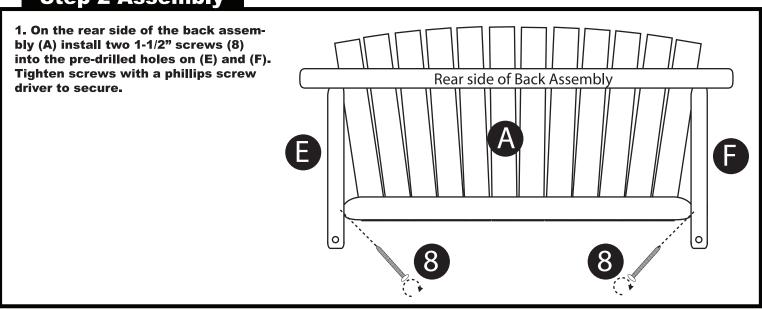


Step 3 Assembly

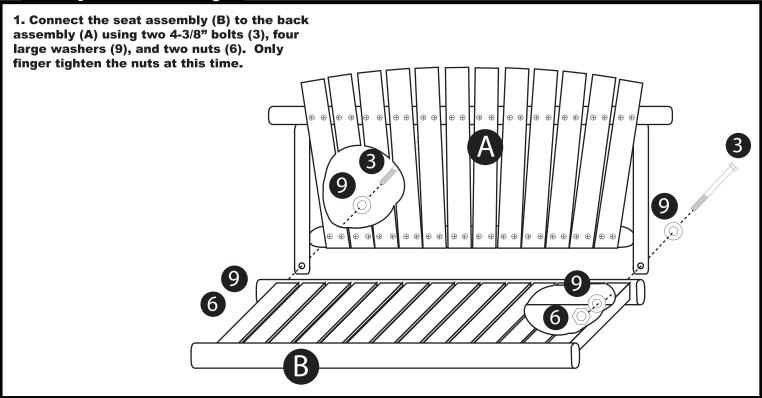


Step 4 Assembly

- 1. Connect the right arm (C) to the seat assembly by inserting the tenon into the hole in the seat. Secure the arm to the back assembly using one 4-3/8" bolt (3), two large washers (9), and one nut (6). Only finger tighten at this time.
- 2. Connect the left arm (D) to the seat assembly by inserting the tenon. Secure the arm to the back assembly using one 4-3/8" bolt (3), two large washers (9), and one nut (6). Only finger tighten at this time.

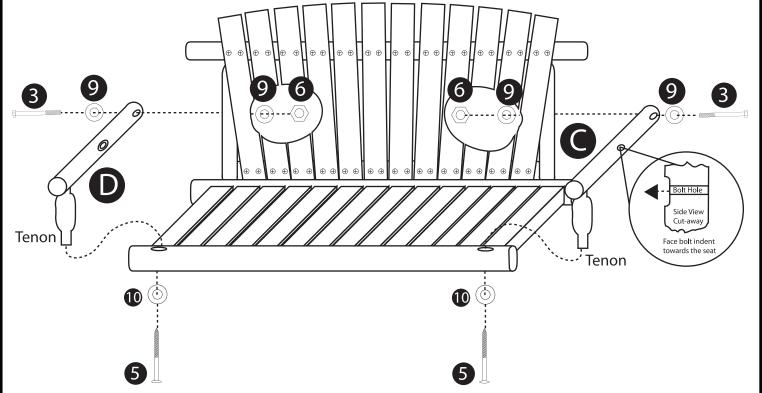

3. Secure the bottoms of the right (C) and left (D) arms to the seat assembly using two - 2-3/4" screws and two small washers (10). Use a phillips srew driver to secure.

Step 5 Assembly

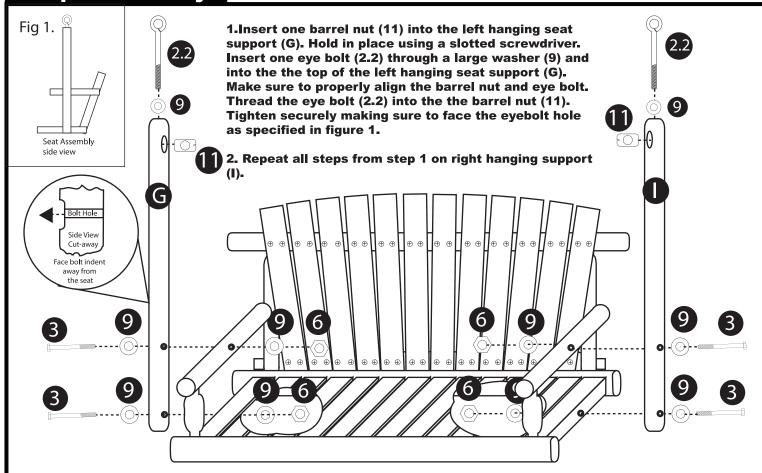

- 3. Connect the left hanging seat support (G) to the seat assembly using two 4-3/8" bolts (3), four large washers (9), and two nuts (6). Only finger tighten at this time.
- 4. Connect the right hanging seat support (I) to the seat assembly using two 4-3/8" bolts (3), four large washers (9), and two nuts (6). Continue to step 6.




Step 6 Assembly

1. Tighten all hardware on the seat assembly.




Step 7 Assembly

3. Lay beam (H) on the ground as specified in the illustration. Connect frame legs (J) and (K) to the beam (H) using two 6-1/2" bolts (1.1) four large washers (9), and two nuts (6). Make sure to face the bolt indent on the main support (J) and (K) towords the ground. Only finger tighten hardware at this time.

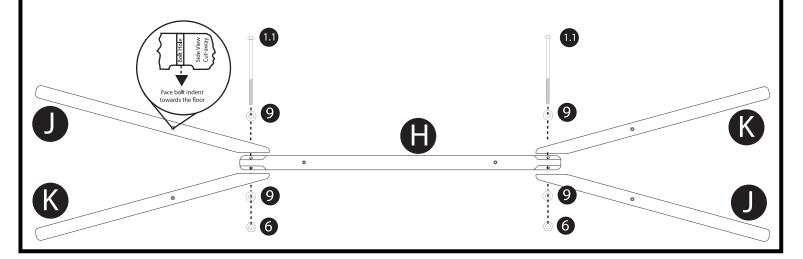


Step 8 Assembly

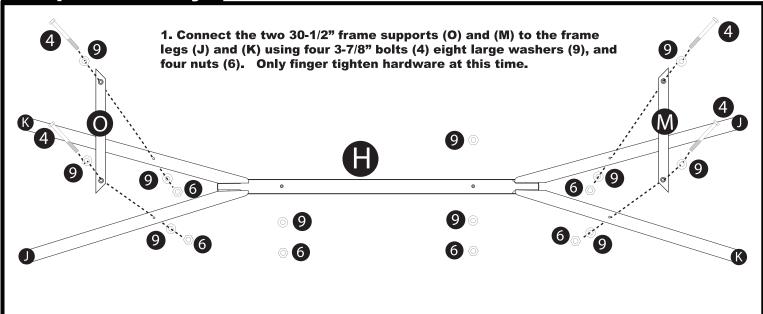


Step 9 Assembly

1. Connect the four 35-1/2" frame supports (L) and (N) to the beam (H) through the offset hole using two 7-7/8" bolts (1), four large washers (9), and two nuts (6). Only finger tighten hardware at this time.

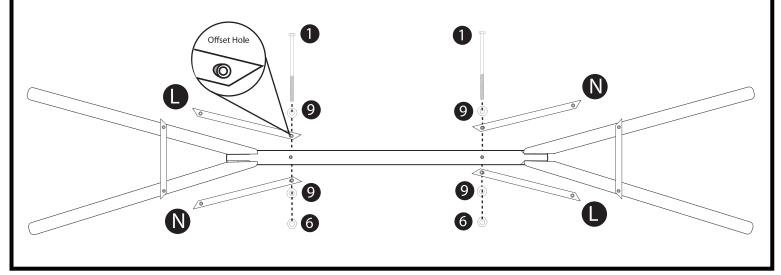


Step 10 Assembly

3. With the help of another person stand the assembly upright. Secure the 35-1/2" frame supports (L) and (N) to the frame legs (J) and (K) using four 3-7/8" bolts (4) eight large washers (9), and four nuts (6). Continue to step 11.

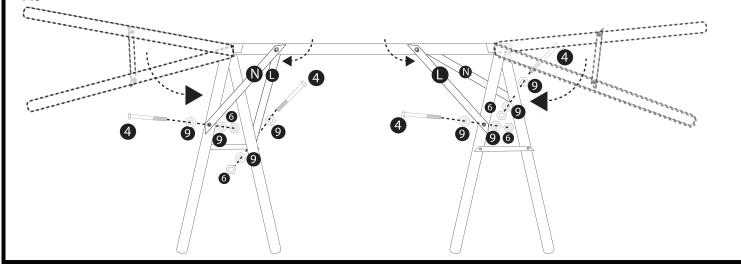



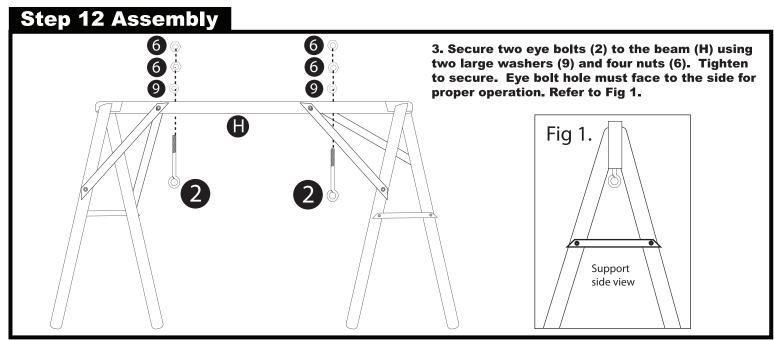

Step 13 Assembly 1. With the help of another person attach the swing assembly to the frame assembly using the two S-hooks (7). YOU ARE DONE!! ENJOY YOUR NEW SWING